

Quick Start Guide

Levellogger 6 Series



Get Quote



Installing the Software

To begin using your Levellogger, download the newest version of Levellogger Software and User Guide by visiting: <https://downloads.solinst.com/>

Installing the Hardware

Connect your datalogger to a computer using either the Optical Reader (Desktop Reader or Field Reader), or PC Interface Cable if your Levellogger is connected to a Direct Read Cable.



Desktop Reader



Field Reader

Optical Readers



Direct Read
Cable



Mk3 PC Interface Cable

Programming the Levellogger

Note: Ensure the Levellogger is operating with the latest firmware, and that you are using the latest software. Visit the Solinst website (<https://downloads.solinst.com/>) or use the update notifications in the software for assistance. If older Levellogger versions are used, refer to our Compatibility Chart on the Downloads page.


1. Connect the Levellogger to the communications device and start the software.
2. Select the appropriate Com Port for the connected communications device from the centre drop-down menu.
3. Click the 'Retrieve Settings from Levellogger' icon. This will retrieve and display information about the connected datalogger, and any current programmed settings. 
4. Diagnostic self-tests will be performed for the connected datalogger, and Direct Read Cable if an Mk3 PC Interface Cable is used. Full test results can be viewed in the 'Diagnostic' tab.
5. You can now customize the Levellogger including your Project ID, Location, Sampling Mode and Rate, and Future Stop and Start times.

Note: If you are using the datalogger with an SDI-12/MODBUS Cable, please see separate User Guides.

Levellogger 6 Series Quick Start Guide



Tip: If a number of Levelloggers are to be programmed with identical inputs, clicking the 'Save Default Settings' icon will create a template.

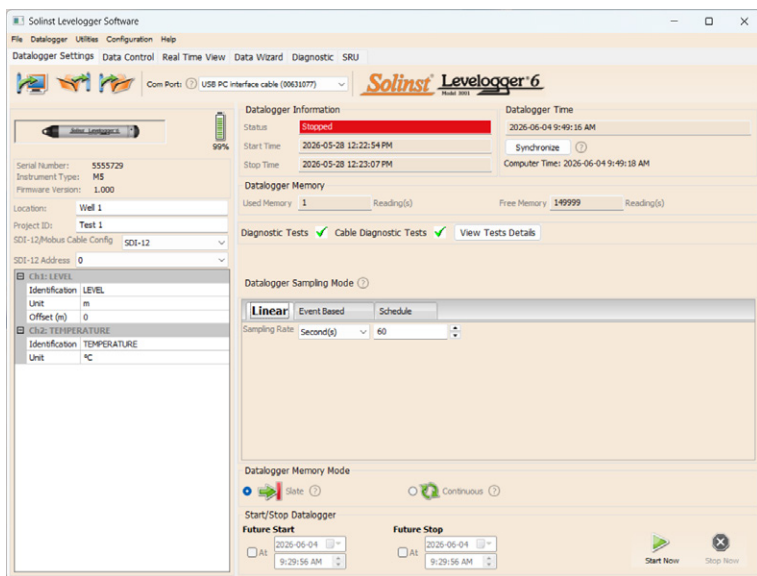

Datalogger Settings Window

Note: Clicking on the (?) in the software will provide you with a short explanation of that feature, e.g. Com Port, Slate Mode, Time Synchronization, etc.



Rainlogger 6 Programming

The Rainfall Calibration Constant 'value' of the tipping bucket rain gauge used with the Rainlogger 6 is required when programming the Rainlogger 6. Consult the Levellogger User Guide for more information on programming the Rainlogger 6.



Levellogger 6 LTC Calibration

Before deploying your Levellogger 6 LTC, be sure to calibrate the instrument. To begin calibration, open the 'Conductivity Cal' tab and follow the steps provided. Consult the Levellogger User Guide for more information, or view the LTC Calibration Video on our YouTube Channel: <https://www.youtube.com/user/SolinstCanadaLtd>

Starting and Stopping the Levellogger

Note: Levellogger 6 Junior and Rainlogger 6 do not have the Future Stop function.

1. If desired, enter a Future Start and/or Future Stop Time. To start logging immediately, do not fill in a future start time and click the 'Start Now' icon. 

Note: Remember to download any data from the datalogger before starting a new logging session. When starting a new logging session, any data from previous recording sessions will be erased.

2. All settings are applied to the Levellogger and it will start logging at the specified time.
3. To stop the Levellogger immediately, click the 'Stop Now' icon. 

Tip: The 'future start' and 'future stop' options are ideal for synchronizing the data collection of multiple Levelloggers and Barologgers.

Downloading and Working with Data

1. Click the 'Data Control' tab to access the 'Data Control' window. This window is laid out in three sections: Levellogger settings, tabular data, and graphical data.
2. To download the data from a connected Levellogger, select the 'Download Data from Levellogger' icon. There are four options for downloading data. They are: All Data, Append Download, Partial Download and Recover Previous Log. The data will be presented in both tabular and graphical format. 

Note: The default directory for downloaded and saved data is in the 'Data' folder: <C:\Program\Files\Solinst\Levellogger 6\Data>. Data is saved as a *.xle data file.

3. To save data, click the 'Save Data' icon and input desired name for the saved file. 
4. To export the file for use in other software, click the 'Export' icon. The file can be exported to a *.csv or *.xml file. 


Note: To change the default directory for downloaded data, use the 'Configuration' menu at the top of the software window. Select 'Application Settings' and input or navigate to a different folder destination. Click 'OK'.

Tips: The *.csv and *.xml file formats are supported and can be imported by most spreadsheet and database programs.

The data graph can be exported to a *.bmp file or a *.png file by clicking File > Export > Graph.

To merge separate .xle data files into one, go to File > Merge Files

Levellogger 6 Series Quick Start Guide

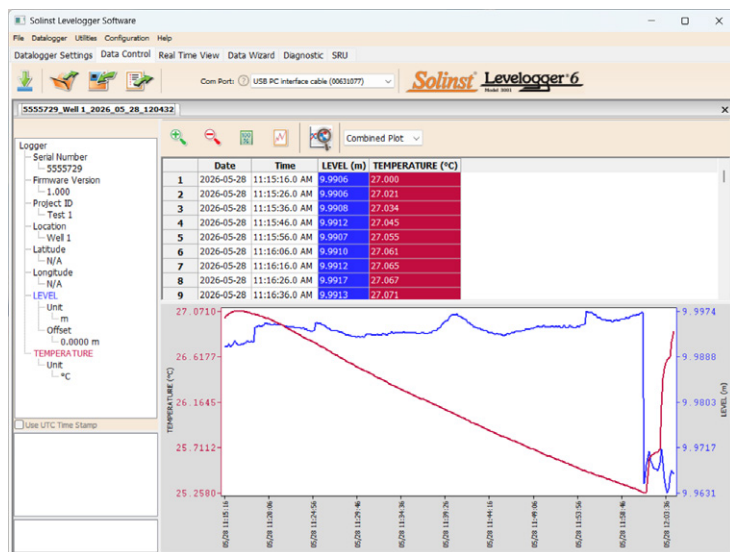

Data Control Window

Note: You can check the box to **Use UTC Time Stamps** when viewing your data.

Data Analysis



The Data Analysis function allows you to view your logged data as min, max, average, median, and standard deviation values per user-defined interval. Filters can tabulate data over user-specified intervals, including by the minute, hour, day, or week. Use the filters to extract information from logged data, create a new data series, graph it, and export it.

Real Time View

Real Time View provides on-screen measurement as data is being recorded by the connected datalogger. A view rate is set independently of the logging period of the Levellogger and does not interfere with internal logging taking place. To take a reading at any specific time, click  and that reading will be added to the displayed data. The data can be exported and saved.

Compensate the Data

Click the 'Data Wizard' tab to open the 'Data Wizard' window. In this window the 'Wizard' will guide you through Barometric Compensation, Manual Data Adjustments, and Parameter Adjustments on your open data files. There are two convenient options; Basic or Advanced compensation. This allows you to choose just one, two, or all three types of compensation. Multiple Levellogger files can be barometrically compensated at once, using one open Barologger file.

Tip: 'Manual Data Adjustment' allows you to use manual water level measurements to adjust your data to depth to water readings.

Levellogger Field Measurement

Levellogger 6 Ranges

Each model of Levellogger is rated for a specific submergence depth (Table 1). The choice of model largely depends on the accuracy of the water level required and the submergence depth. The selection, however, should be based on the maximum anticipated water level fluctuation.

Model	Submergence Depth	Accuracy
Barologger	Air only	± 0.05 kPa
M5	5 m (16.4 ft.)	± 0.3 cm (0.010 ft.)
M10	10 m (32.8 ft.)	± 0.5 cm (0.016 ft.)
M20	20 m (65.6 ft.)	± 1 cm (0.033 ft.)
M30	30 m (98.4 ft.)	± 1.5 cm (0.049 ft.)
M100	100 m (328.1 ft.)	± 5 cm (0.164 ft.)
M200	200 m (656.2 ft.)	± 10 cm (0.328 ft.)

Table 1 – Levellogger 6 Ranges

Measurement Fundamentals


Levelloggers (**L**) measure the total pressure acting on a transducer at their zero point/sensor. The total pressure is caused by the column of water lying above the Levellogger pressure sensor AND the barometric (atmospheric) pressure acting on the water surface. To compensate for barometric pressure fluctuations and get true height of water column measurements (**H**), a Barologger (**B**) is required, i.e.:

$$\text{Levellogger Reading (L)} - \text{Barologger Reading (B)} = \text{Height of Water Column (H)}$$

Verifying Readings

The best recommendation is to compare barometrically compensated Levellogger data (**H**) with a manually measured depth to water level value (**d**) (using a Water Level Meter).

Tip: To adjust all readings in your Levellogger file to depth to water below a well casing (**d**), record a manual water level measurement using a water level meter. This reading should correspond in date and time with an actual Levellogger recording. Use this as a reference datum in the Manual Data Adjustment option in the Levellogger Software Data Wizard.

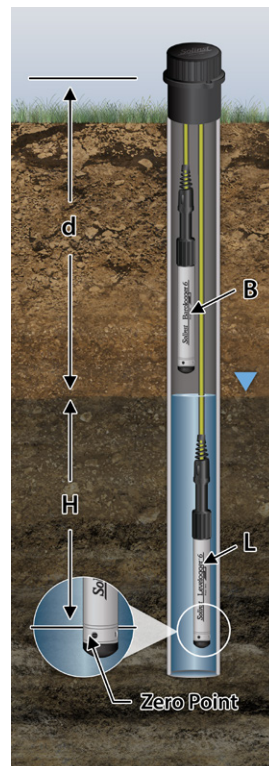

Levellogger 6 Series Quick Start Guide

Note: The Levellogger 6 can withstand over-pressurization of 2 times the intended range, e.g. a Model M10 can accommodate a fluctuation of 20 meters or 65 feet and still record pressure. However, over-range accuracy is not guaranteed.



A single Barologger 6 can be used to compensate all Levelloggers on site, within a 30 km/20 mile radius and with every 300 m (1000 ft.) change in elevation. Ensure that your Barologger will start logging within at least 3 hours of your Levellogger start time.

Levellogger Field Notes

Tip: It is recommended to take a manual water level measurement before installing a Levellogger, shortly after installation, periodically during your monitoring interval, and at the end of your measurement period. Use these measurements to verify Levellogger readings, and for data adjustments later on. Ensure you take manual readings as close in time as possible to a scheduled Levellogger reading.

Before Deployment

Before deployment, make sure you do the following:

- Program your Levellogger, using Levellogger Software, with the correct project identification, memory mode, sampling regime, time, etc.

Note: It is useful to synchronize the times of all Levelloggers and Barologgers being used for the same project.

- Set a future start time, or start the Levellogger if deploying on a wireline/Kevlar cord (Levelloggers can be started after deployment if using a Direct Read Cable)
- Determine borehole depth to ensure the Levellogger does not touch the bottom of the well (avoid submergence in sediment)
- Determine the minimum and maximum expected water levels, as Levelloggers must remain submerged for the entire monitoring period, and Barologgers must not be submerged
- Use a Solinst Model 101 or 102 Water Level Meter to take a manual depth to water measurement that will be used to verify Levellogger readings

Note: If you are using an old style Direct Read Cable with a Levellogger 6 Series datalogger, you will need to use an L5-Edge DRC Adaptor.





Wireline/Cord Deployment



Direct Read Deployment

Deployment

- Deploy your Levellogger and Barologger using a Direct Read Cable for down-well communication, or use an inexpensive wireline or Kevlar cord.

Note: For information on other types of installations, see the latest [Levellogger User Guide](#).

- Install the Barologger in a similar thermal environment as the Levellogger
- The Barologger should be suspended beyond the frost line and deep enough to avoid large temperature fluctuations
- Ensure the Barologger location is vented to atmosphere

After Deployment

After deployment, make sure you do the following:

- Take a manual depth to water measurement after the well has stabilized (approximately 10 minutes)
- Take another manual depth to water measurement just before removing the Levellogger from the well

Well Caps

The Model 3001 2" (or 4" with Adaptor) Well Cap Assembly provides a secure method of installing your Levellogger using wireline/Kevlar cord or Direct Read Cables. A Support Hanger Bracket is available for supporting and organizing down well wires or cords, or for coiling extra Direct Read Cable lengths.



Levellogger 6 Series Quick Start Guide

In-field Communication

If you have installed your Levellogger using wireline/Kevlar cord, you can communicate with your Levellogger via a Field Reader or Desktop Reader and Levellogger Software on a laptop.

If you have installed your Levellogger using a Direct Read Cable, you can communicate with your Levellogger via a PC Interface Cable and Levellogger Software on a laptop. You can also use a Levellogger App Interface and the Solinst Levellogger App on your mobile device, or connect an SRU or a DataGrabber, without removing the Levellogger from the well.



Field Reader



Desktop Reader



Mk3 USB-C PC Interface Cable



Levellogger App Interface



SRU



DataGrabber



Note: A Threaded or Slip Fit Adaptor can be used to directly connect a Levellogger to a Levellogger App Interface, SRU or DataGrabber.

Maintenance

As with any monitoring project, you should select the proper equipment and determine a maintenance schedule based on the environment specific to your application.

Maintenance tips include:

- Inspect regularly, and replace the o-ring at the optical end of the Levellogger if damaged
- Clean the optical eye of the Levellogger with a clean, soft cloth or cotton swab
- Rinse the Levellogger body using a mild, non-residual, non-abrasive household cleaner
- Use a very soft-plastic bristled brush, if needed, to clean the Levellogger body
- Do not insert any object through the circulation holes at the sensor end of the Levellogger
- See the [Levellogger User Guide Maintenance Section](#) if simple household cleaners are not sufficient for certain issues, such as hard water build up
- Clean Levellogger 6 LTC conductivity sensor pins before calibration and before/after deployment—see the Solinst Levellogger User Guide
- Stop the Levellogger from recording before storing
- Store Levelloggers with the installation cap on and in the case they were originally provided in
- Store Levelloggers in above-freezing conditions
- Read our Technical Bulletin “[Ensuring Proper Use and Maintenance of Levelloggers](#)”

Note: A Solinst Biofoul Screen can be used to protect the Levellogger 6 from biofouling on the pressure sensor, and the conductivity cell of a Levellogger 6 LTC.



Note: All Levelloggers should be deployed and stored with the installation cap or Direct Read Cable attached. This prevents unnecessary battery drainage and protects the optical eye.

Levellogger 6 Series Quick Start Guide

Troubleshooting Guide

Levellogger Software:

1. You must have administrator privileges to install software on a computer.
2. Windows 10 and 11 Operating Systems support Levellogger Software.

Communication Errors:

“Port Cannot Open”, “Check Com Port”

1. Reason: Software was started before USB device was connected to computer.
Solution: Restart computer, connect USB device, start software.
2. Reason: Incorrect Com Port is selected in Com Port selection menu.
Solution: Check the Com Port location for the installed device, by accessing the ‘Device Manager’ (through the Control Panel), and selecting the “Ports” section. This will state the Com Port the device is installed on.
3. Reason: Another device shares the same Com Port or is causing a communication conflict.
Solution: Ensure that software for PDA or other devices, which automatically synchronize, are disabled. Ask your system administrator for assistance.

“Communication Time-Out”, “Communication Error”

1. Reason: Levellogger, Direct Read Cable, or communications device has failed.
Solution: a) Narrow down the failure by using a different Levellogger, Direct Read Cable, or another communications device.
b) Clean the optical eye/lens on the Levellogger and Optical Reader (Desktop Reader or Field Reader), or Direct Read Cable, with a soft cloth.
c) Check that the communication cable is connected to the same Com Port that is chosen in the upper middle of the Levellogger Software window.
d) Try using a different computer, to see if this is the cause of the problem.
e) If using a laptop (especially in conjunction with a Direct Read Cable) your Com Port may not be powered adequately to receive/transmit data. Try using a desktop computer to test this.
f) If problem persists, contact Solinst.

Frequently Asked Questions

(Also see <https://www.solinst.com/products/dataloggers-and-telemetry/3001-levellogger-series/levellogger-faq/levellogger-faq.php>)

How can I protect my Levellogger from corrosive or marine environments?

The Levellogger 6 and Levellogger 6 LTC have a corrosion resistant coating. In harsher chemical environments, you can protect the Levellogger using a thick membrane balloon (e.g. helium) filled with non-corrosive/non-toxic fluid (tap water). As pressure changes, the fluid encasing the dataloggers will transmit the pressure differential to the datalogger's pressure transducer, without exposing it to corrosive conditions. Continual monitoring is recommended to assess the effectiveness of the protection at your site.

How do I install my Levellogger in a surface water application?

For installations within rivers, streams, wetlands, lakes and watershed or drainage basin monitoring, the shallow pressure range (M5) Levellogger 6 or Levellogger 6 Junior should be considered. For installation in streams or rivers, stilling wells can be constructed which shield the instrument from the water turbulence. Alternatively, Levelloggers can be lowered into a protective pipe or casing and then attached to a permanent fixture such as a bridge, pier or hand driven marker/rod.

How do I protect my Levellogger from freezing?

To avoid icing/freezing and transducer damage, the easiest method is to lower the transducer to a point in the water column below the frost line or ice formation depth. In water bodies such as shallow streams, wetlands or ponds where icing/freezing may penetrate to the bottom, install the Levellogger in a vented stilling well embedded into the bottom of the water body beyond the frost line.

If this is not possible, place the Levellogger inside a thick membrane balloon filled with a non-toxic, non-corrosive anti-freeze solution or saltwater solution. Place the balloon in a section of perforated, 30 mm (1.25") ID pipe and install the datalogger in the monitored water. The antifreeze solution will protect the Levellogger from ice expansion at the pressure transducer, yet transmit any pressure and temperature fluctuations that occur.

How do I protect my Levellogger from biofouling?

Use the Solinst Model 3001 Biofoul Screen.

Is Levellogger maintenance required?

Yes, consult the Solinst Technical Bulletin "[Ensuring Proper Use and Maintenance of Levelloggers](#)" to maintain the long life of your instrument, based on the monitoring environment specific to your application.